

ACHTUNG! Lesen Sie die Bedienungsanleitung vollständig und sorgfältig. Sie ist Bestandteil des Produktes und enthält wichtige Hinweise zur Benutzung. Bewahren Sie dieses Dokument auf.

Sicherheitshinweise

⚠️ WARNUNG	Lebensgefahr durch Erstickten >> Kleinteile und Dämmmaterial gegen unbeabsichtigte Benutzung sichern.
⚠️ VORSICHT	Verletzungsgefahr durch Schneiden >> Kleinteile und Verpackungen gegen unbeabsichtigte Benutzung sichern.
ACHTUNG	Gefahr durch ungeeignete Umgebungsbedingungen • Extreme Umgebungsbedingungen können das Produkt beschädigen oder zerstören. >> Belastungen, wie Hitze und Kälte, Nässe und direkte Sonneneinstrahlung sowie Vibrationen und mechanischen Druck vermeiden. Gefahr durch Selbsteingriffe und Zweckentfremdung • Selbsteingriffe und Zweckentfremdungen bergen unvorhersehbare Risiken und führen zum Erlöschen des Garantieanspruchs. >> Modifizieren und ändern Sie weder Produkt, Produktteile noch Zubehör! >> An gut erreichbarer Stelle installieren.

Beschreibung und Funktion

LNB-Anschluss
(Satellitenschüssel)

Montagelöcher



SAT-Receiver-Anschluss (SLAVE OUT)

SAT-Receiver-Anschluss (MASTER OUT)

Ihr Produkt dient dem Anschluss von 2 SAT-Receiver an eine Koaxialleitung (ein Master- und ein Slave-Anschluss). Der am Master Ausgang „Master OUT“ angeschlossene SAT-Receiver bestimmt den LNB-Ausgang bzw. die Programmumschaltung. Der am Slave Ausgang „Slave OUT“ angeschlossene SAT-Receiver bestimmt den LNB Ausgang bzw. die Programmumschaltung nur, wenn der SAT-Receiver am Master OUT ausgeschaltet / auf Standby geschaltet ist. Der Receiver-AUS- / Standby-Zustand ist bei 0V DC festgelegt.

Bestimmungsgemäßer Gebrauch




Dieses Produkt ist nur zum Betrieb mit SAT-Receivern geeignet. Verwenden Sie das Produkt nur im Trockenen.

Vorbereitung

1. Packungsinhalt mithilfe des Lieferumfangs auf Vollständigkeit und Unversehrtheit kontrollieren.
2. Technische Daten aller zu verwendenden Geräte und Produkte vergleichen und Kompatibilität sicherstellen.

Anschluss und Installation

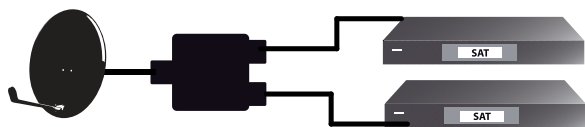

Master

Slave

1. Wählen Sie eine geeignete Montage-/Installationsstelle aus.
Achten Sie hierbei auf die nötigen Kabellängen.
2. Schließen Sie den Master SAT-Receiver am Anschluss „Master OUT“ an.
3. Schließen Sie den Slave SAT-Receiver am Anschluss „Slave OUT“ an.
4. Verbinden Sie den LNB-Anschluss „LNB IN“ mit Ihrem LNB.

Wartung, Pflege, Lagerung und Transport

ACHTUNG	Sachschaden • Das Produkt ist wartungsfrei. >> Nur mit weichem und leicht feuchtem Tuch reinigen. >> keine Chemikalien einsetzen. >> Originalverpackung für Lagerung und Transport benutzen. >> Für Kinder unzugänglich aufbewahren. >> Trocken und staubgeschützt lagern.
----------------	---

Gewährleistung und Haftung

- Gewährleistungszeitraum: 2 Jahre ab Kaufdatum.
- Da der Hersteller keinen Einfluss auf die Installation des Produktes hat, deckt die Gewährleistung nur das Produkt selbst ab.
- Der Hersteller haftet nicht für Personen- oder Sachschäden, die durch unsachgemäße Installation, Bedienung oder Wartung entstanden sind.
- Ein in diesem Dokument nicht genannter Einsatz ist unzulässig und führt zu Gewährleistungsverlust und Haftungsausschluss.
- Druckfehler und Änderungen an Gerät, Verpackung oder Anleitung behalten wir uns vor.

Technische Daten

Frequenzbereich	950 - 2500 MHz
Maße	60.5 x 49.8 x 15.5 mm
Lieferumfang	Vorrangschalter, Betriebsanleitung

Entsorgungshinweise



Elektrische und elektronische Geräte dürfen nach der europäischen WEEE Richtlinie nicht mit dem Hausmüll entsorgt werden. Deren Bestandteile müssen getrennt der Wiederverwertung oder Entsorgung zugeführt werden, weil giftige und gefährliche Bestandteile bei unsachgemäßer Entsorgung die Umwelt nachhaltig schädigen können.

Sie sind als Verbraucher nach dem Elektroggesetz (ElektroG) verpflichtet, elektrische und elektronische Geräte am Ende ihrer Lebensdauer an den Hersteller, die Verkaufsstelle oder an dafür eingerichtete, öffentliche Sammelstellen kostenlos zurückzugeben. Einzelheiten dazu regelt das jeweilige Landesrecht. Das Symbol auf dem Produkt, der Betriebsanleitung oder/und der Verpackung weist auf diese Bestimmungen hin. Mit dieser Art der Stofftrennung, Verwertung und Entsorgung von Altgeräten leisten Sie einen wichtigen Beitrag zum Schutz unserer Umwelt.

WEEE Richtlinie: 2012/19/EU

WEEE Nr.: 82898622

CE-Konformitätserklärung



Mit dem CE Zeichen erklärt Goobay®, eine registrierte Marke der Wentronic GmbH, dass das Produkt die grundlegenden Anforderungen und Richtlinien der europäischen Bestimmungen erfüllt. Diese können online auf www.goobay.de angefordert werden. Alle Handelsmarken und registrierten Marken sind das Eigentum ihrer jeweiligen Inhaber.

Kontakt

Goobay®
Pillmannstraße 12
38112 Braunschweig
Germany

Hotline: +49 (0)180 5005882

E-Mail: info@goobay.de

Web: www.goobay.de

Made in China.

*(0,14 € pro Minute aus dem deutschen Festnetz. Maximal 0,42 € pro Minute aus dem Mobilfunknetz.)

Dokumentdaten

Name 51445

Version 2

Ausgabestand 2013-03-15

User's manual for SAT Priority switch (analog/digital)

Art.-Nº: 51445



ATTENTION! Read the user's manual completely and carefully. It is part of the product and includes important information for proper installation and use. Keep this user's manual for clarification and only pass it on together with the product.

Safety Instructions

 WARNING	Risk of life by suffocating >> Protect small parts and insulation material against unintentionally use.
 CAUTION	Risk of injury by cutting >> Protect packaging materials against unintentionally use.
 NOTICE	Risk due to inappropriate environmental conditions • Extreme conditions can damage or destroy the product. >> Avoid extreme conditions, such as extreme heat, coldness, humidity or direct exposure to the sun, as well as vibrations and mechanical pressure. Risk of self-intervention and misuse • Self-interventions and misuse hide unpredictable risks and cause expiration of warranty. >> Do not modify or alter either the product or the accessories!

Description and Function

LNB Port
(satellite dish)

Mounting holes



SAT receiver connection (SLAVE/2)

SAT receiver connection (MASTER/1)

Your product is made for connecting 2 satellite receivers by one coaxial line (one master and one slave port). At the Master OUT the satellite receiver is connected, determining the LNB output and the program switching. The satellite receiver connected to Slave OUT only determines the LNB output and program switching when the Master satellite receiver is switched off / to standby. The receiver-off / standby mode is set at 0V DC.

Intended Use




This product is only suitable for using with satellite receivers. Only use the product in dry interior rooms.

Preparing

1. Check the packing content for being complete and undamaged.
2. Compare the specifications of all used devices and check them for being compatible to each other.

Connecting and Operating

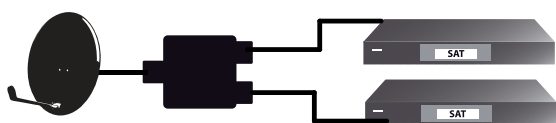

Master

Slave

1. Select an appropriate mounting / installation place. Attend to the required cable lengths.
2. Connect the Master satellite receiver to connection „Master OUT“.
3. Connect the Slave satellite receiver to connection „Slave OUT“.
4. Connect the LNB connection „LNB IN“ to your LNB.

Maintenance, Care, Storage and Transport

 NOTICE	Material Damage • The product is maintenance-free. >> Only use a dry, soft and slightly moist cloth to clean the product. >> Do not use any cleaning supplies. >> Use the original packing for storing and transport. >> Keep the product away from children. >> Store in dry and dust-proof way.
---	--

Warranty and Liability

- Warranty: 2 years from purchase date.
- As the manufacturer has no influence on installation, warranty only applies to the product itself.
- If any fault or damage is detected on your device, please contact your dealer and provide your sales slip or invoice as evidence of the purchase, if necessary. Your dealer will repair the fault either on site, or send the device to the manufacturer. You make the work of our technicians considerably easier, describing possible faults in detail – only then you can be assured that faults, occurring only rarely, will be found and repaired with certainty!
- The manufacturer is not liable for damages to persons or property caused by improper installation, operation or maintenance, not described in this manual.
- Any use other than described in this user's manual is not permitted and causes loss of warranty, loss of guarantee, and non-liability.

User's manual for SAT Priority switch (analog/digital)

Art.-Nº: 51445



- We reserve our right for misprints and changes of the device, packing, or user's manual.

Specifications

Frequency range	950 - 2500 MHz
Dimensions	60.5 x 49.8 x 15.5 mm
Lieferumfang	Vorrangschalter, Betriebsanleitung

Disposal Instructions



According to the European WEEE directive, electrical and electronic equipment must not be disposed with consumers waste. Its components must be recycled or disposed apart from each other. Otherwise contaminative and hazardous substances can pollute our environment.

You as a consumer are committed by law to dispose electrical and electronic devices to the producer, the dealer, or public collecting points at the end of the devices lifetime for free. Particulars are regulated in national right. The symbol on the product, in the user's manual, or at the packaging alludes to these terms. With this kind of waste separation, application, and waste disposal of used devices you achieve an important share to environmental protection.

WEEE Directive: 2012/19/EU
WEEE No: 82898622

CE Declaration



With the CE sign the Goobay®, a registered trademark of the Wentronic GmbH ensures, that the product is conformed to the basic standards and directives. These standards can be requested online on www.goobay.de. All trademarks and registered brands are the property of their respective owners.

Contact

Goobay®
Pillmannstraße 12
38112 Braunschweig
Germany

Made in China.

Hotline: +49 (0)180) 5005882
E-Mail: info@goobay.de
Web: www.goobay.de

*(0.14 € per minute from German conventional network. Maximum 0.42 € per minute from mobile networks.)

Document Informations

Name 51445
Version 2
Revision Date 2013-03-15