


ECO HARDSHELL CASE


FOR MACBOOK PRO 2021

1

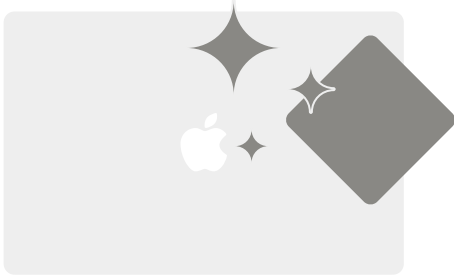

Before installing the Eco Hardshell Case, please properly clean your computer.

2

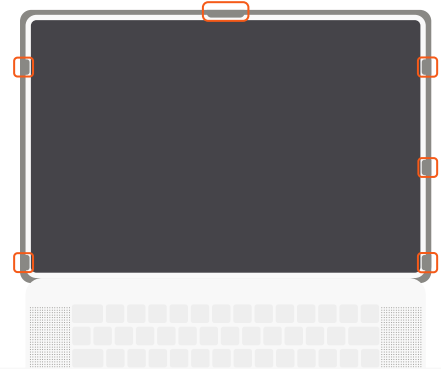

When installing the top case, ensure all **6 clips** snap into place.

3




If installed correctly, the logo should be on the bottom right.

4



When installing the bottom case, ensure all **5 clips** snap into place.

5

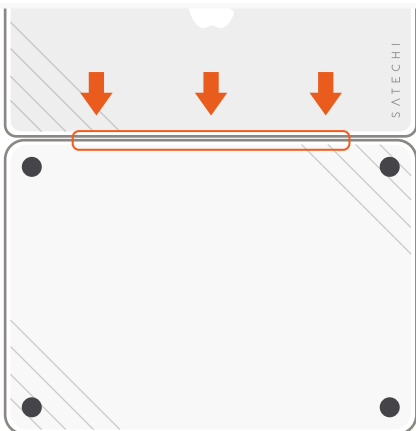

Ensure this long clip snaps into place as well. If it does not snap into place, the case will fall off.

6



Ensure the vents are properly aligned.